

Setting Up the MIXTRACK in Traktor



Contents

1. [Install the latest version of Traktor](#)
2. [Configure the Controller Settings](#)

Install the latest version of Traktor


Before you begin, make sure you have the latest version of Traktor installed.

Launch Traktor, then go to **Help > Launch Service Center**. Select the **Updates** tab and make sure you download any **Traktor** updates you see.

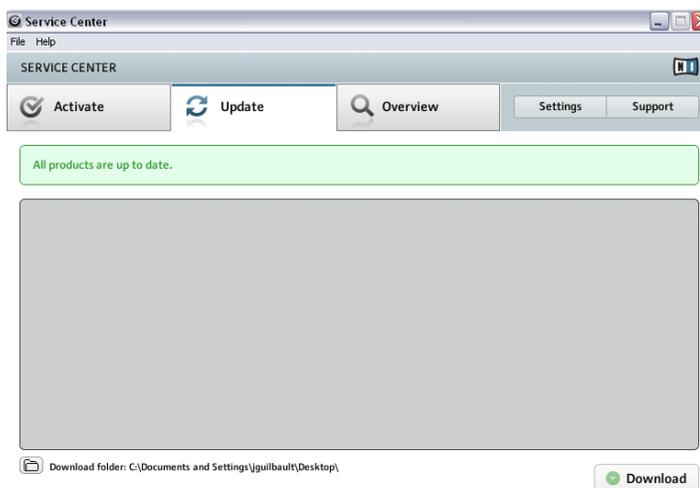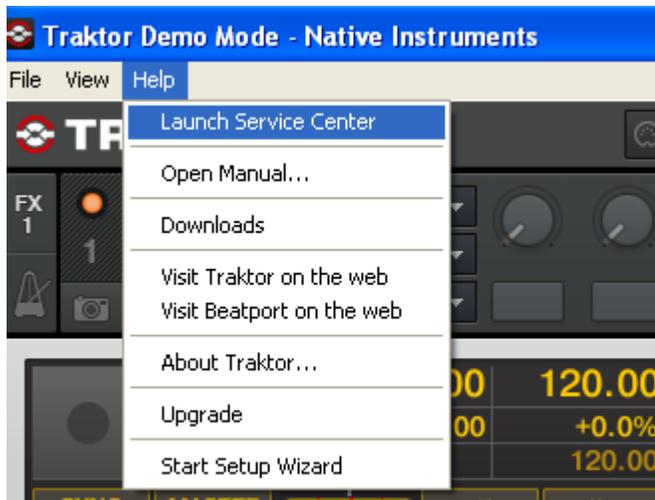

Configure the Controller Settings

1. In Traktor, go to **Help > Start Setup Wizard**.

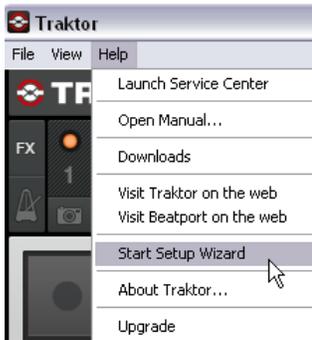

2. In the window that opens, click **Next**.



3. Next, you'll be asked, **Are you using a USB/FireWire controller?** Choose **Yes**, then click **Next**.




4. On the next page, next to **Choose your manufacturer**, choose **Numark**.

The selection you make next to **Choose your model** will depend on which version of Traktor you are using.

 **IMPORTANT** making the incorrect selection in this step will prevent your controller from controlling the software properly.

Traktor LE users should choose **Mixtrack LE** here.

Traktor PRO and **Traktor Duo** users should choose **Mixtrack** here.

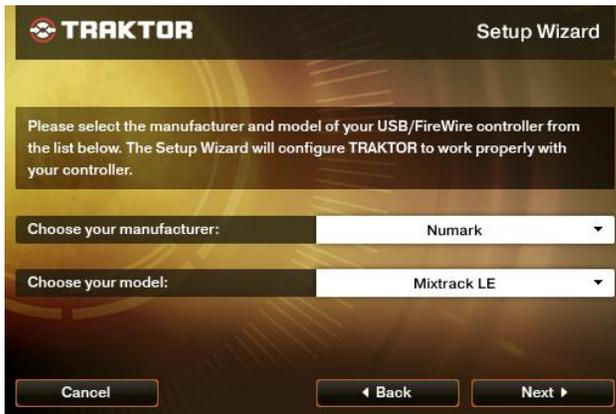

5. Click **Next**, then click **Finish** on the last page to close the Setup Wizard Window.

You should be set up and ready to go.