

Mixdeck Express Firmware Installation Process



Materials

1. Mixdeck Express
2. NC17_022.bin firmware installation file
3. USB Thumb drive

Installation Procedure

1. Press and hold the **PROG** button while powering on the Mixdeck Express. Continue to hold **PROG** until **UPGRADE MODE** is displayed on the screen.
2. Load the NC17_022.bin file to the root level of an empty USB thumb drive (root).
3. Insert the USB key to the USB-A port on the upper-left corner of the Mixdeck Express top pane. The display should read **<Scanning>**.
4. When scanning is complete, and the Mixdeck Express has located the firmware file, the display will read **<Ready>**.
5. Press **Play** to begin the firmware installation.
6. When the installation is complete, the display will read **<Finish>**.
7. Then, power off the Mixdeck Express, count to 10, and power it back on.