

Software Update Procedure for Axis8/Axis9/CDN90

Downloading

1. Download the software update file from the Numark website.
2. If zipped, unzip the file using WinZip or equivalent software.

Burning

3. Start your CD burning software and set it to burn an AUDIO CD.
4. Load the WAV file into your CD burning program. It is advisable to burn the CD at the slowest speed possible to ensure an accurate burn. If you have a disc-at-once option, it should be used.
5. Burn the disc and finalize the CD.

Programming

6. Power up your CD player with no CD inside.
7. Place in the CD in the tray and close the drawer with the OPEN/CLOSE button. Do not close the drawer by pressing PLAY. *(For Dual CD Players you only need to put the CD in one side)*
8. Wait until the display indicates time remaining.
9. Press the Play button. In the effect parameter display you will see the word "UPdAtE" as the time counts down. The unit will then play automatically a second time while the unit is programmed.
10. At completion of the procedure the CD should eject automatically.

Completion

11. Remove the CD and power the unit off for 3 seconds and then on again.
12. Recalibrate the unit following the document titled "Calibration Procedure".
(For Dual CD players this calibration procedure should be done on both sides)

*In order to check your unit's software version press "PROG" followed by the "+" button. Three sets of numbers will appear. Your units function software will be the second set of numbers. For example if **R1 05 27 07** appears in the display you have Version 1 of revision 27 of the unit code.*

Note: CD burning is dependant upon both the recording equipment and the CD players ability to read the burned information. On rare occasions the unit may have difficulty reading the burned CD. If the CD is ejected during the test procedure, remove the CD and try again. If it fails again try re-burning the CD.

**** IMPORTANT ****

Numark strongly encourages DJs NOT to update their CD players immediately prior to an important event. Numark recommends using a surge protection device when updating your CD player. Power surges, power failures, and other unforeseen events can damage the CD player during the update procedure. Problems may occur due to user error. Thousands of Numark CD players have been successfully updated using the procedure, however, if your product does not function after the update, please contact Numark for professional service. Numark assumes no responsibility for damage to products due to user error.