

FIRMWARE UPDATE

Firmware update, v1.13 (2009.02.13)
Copyright © Numark Industries, Inc. 2007-2009

INSTALLATION

Numark DDS features a failsafe upgrade procedure. If an upgrade fails before it is complete for any reason (including loss of power), the upgrade process should be restarted from the beginning. However, for your convenience, we recommend ensuring that DDS is not powered down until the process is complete.

1. Download the firmware upgrade and the latest release of Librarian to your computer. These are packaged in the file **DDS_v1_13_Update.zip**. You must extract the files from the .zip file.
2. Copy the **DDS_v1_13.upg** file to the top level of a FAT-formatted USB storage device. Erase any earlier .upg files from the device. Be sure to copy the .upg file and not the .zip!
3. With the DDS turned off, connect the USB storage device to any USB port.
4. Remove all other connected storage devices.
5. With the DC power jack connected, press and hold the power button until you see the message "Waiting for Media" on screen. This will take about four seconds, after which you can release the power button. If the screen does not display this message, switch off DDS and try again, taking care not to release the power button too early.
6. After a few seconds, the message "Any key updates to version ..." will be displayed with the version number of the new firmware.
7. Press one of the player's buttons (for example, one of the menu buttons).
8. The firmware upgrade will begin, which can take up to about a minute. After several seconds, a progress indicator will indicate the time remaining.
9. Once the update is complete, a message will appear to confirm this. Select **OK** and DDS will switch off automatically.
10. If you haven't already done so, install Librarian v1.50 on your computer. Select the appropriate installer from the Librarian folder:
NumarkLibrarian_v1_50_PC.exe (Windows)
NumarkLibrarian_v1_50_Mac.dmg (Mac)
11. Run the Librarian program and rebuild the libraries on your music devices. Please refer to the release notes below.

RELEASE NOTES

What's New in v1.13

- Fixed an issue where the eject window would not always reflect the correct status of a device.
- Added a demonstration mode, so new users can easily learn how to operate the unit. The demo will be launched automatically after two minutes of inactivity. You can disable this by selecting the "Demo" page on the Utility screen.
- Fixed an issue where loading a track to both decks simultaneously from the file browser on a device without a library could cause the unit to fail.