

Numark HDMIX

Firmware Update v1.13 2009-03-03

Copyright © Numark Industries Inc. 2007, 2008, 2009

Installation

HDMIX features a failsafe upgrade procedure. Should an upgrade fail part way through for any reason (including loss of power) the upgrade process should be restarted from the beginning. However, for your convenience we recommend that you take care to ensure that power is not interrupted until the process is complete.

1. Download the firmware upgrade and the latest release of Librarian to your computer. These are packaged in the file HDMIX_v1_13_Update.zip. You must extract the files from the zip.
2. Copy the HDMIX_v1_13.upg file to the top level of a FAT formatted USB storage device. You should erase any earlier .upg files from the device. Take care to copy the **.upg** file and not the .zip!
3. With the HDMIX powered off, connect the USB device to any USB port.
4. Remove any other connected storage devices.
5. With the DC power jack connected, press and hold the power button until you see the message "Waiting for Media" on screen. This will take about four seconds, after which you can release the power button. If the unit does not display this message switch off and try again, taking care not to release the power button too early.
6. After a few seconds, provided HDMIX is able to locate the upgrade file, the message "Any key updates to version ..." will be displayed. The version of the firmware upgrade is indicated.
7. Press one of the player buttons, for example one of the menu buttons.
8. The firmware upgrade will be loaded, a process which can take up to about a minute. After several seconds a progress indicator will be shown to give you an idea of the work remaining.
9. Once the update procedure has completed a message will confirm successful loading. Select OK and the unit will switch off.
10. If you haven't already done so, install Librarian v1.50 to your PC or Mac. Select the appropriate installer from the Librarian folder: NumarkLibrarian_v1_50_Mac.dmg for Macintosh or NumarkLibrarian_v1_50_PC.exe for Windows.
11. Run the Librarian program and rebuild the libraries on your music devices.