# Numark NS6 NS7 **V7**



# **KEYBOARD SHORTCUTS**

# **VIEWING, TEXT & NAVIGATION**

SHORTCUT	COMMAND		
Ctrl + L	Highlight the last track loaded to that Deck. Press Ctrl + L again to highlight the track loaded on the		
	opposite Deck		
Ctrl + R	Reveal: Open highlighted song in file browser		
Ctrl + F	Find: Move cursor to the Search field		
Ctrl + A	Select all		
Ctrl + E	Edit text		
Ctrl + X	Cut text in Edit Mode		
Ctrl + C	Copy text in Edit Mode		
Ctrl + V	Paste text in Edit Mode		
Ctrl + P	Add tracks to Prepare Panel		
Ctrl + O	Open track in your default MP3/WAV/OGG/AIF player		
– or +	Magnify or shrink main waveform display		
<b>Ctrl</b> + - or +	Magnify or shrink Library Panel text size		
Tab	Toggles cursor focus between Library Panel, Crates list and any open panels		
Ctrl + Del or	Remove track from Library, remove track from Crate, or delete Crate (does not delete the file)		
Ctrl + Backspace	hemove track from Library, remove track from Grate, or delete Grate (does not delete the life)		
Alt + Del or	Remove track from Crate and Library		
Alt + Backspace	Hemove track from Grate and Library		
Ctrl + Shift + Del or	Delete file from your Library and send to Recycle Bin (iTunes users: Files in your iTunes library cannot		
Ctrl + Shift + Backspace	be deleted this way.)		
Esc	Clear Search field if searching, or exit ITCH		

# SP-6 SAMPLE PLAYER

SHORTCUT	COMMAND
Z	Play Sample Slot 1
Х	Play Sample Slot 2
С	Play Sample Slot 3
٧	Play Sample Slot 4
В	Play Sample Slot 5
N	Play Sample Slot 6
Ctrl + Alt + Z	Load to Sample Slot 1
Ctrl + Alt + X	Load to Sample Slot 2
Ctrl + Alt + C	Load to Sample Slot 3
Ctrl + Alt + V	Load to Sample Slot 4
Ctrl + Alt + B	Load to Sample Slot 5
Ctrl + Alt + N	Load to Sample Slot 6

# **DECK & TRACK CONTROLS**

LEFT DECK	RIGHT DECK	COMMAND
Ctrl + ←	Ctrl + →	Load highlighted track to the Deck
Ctrl + Shift + ◆	Ctrl + Shift + →	Load track currently on one Deck onto the opposite Deck, as well
Shift + Alt + ◆	Shift + Alt + →	Unload track from a Deck
Ctrl + Z	Ctrl + Z	Undo last deck load
Ctrl + ,	Ctrl + .	Place a Cue Point
1, 2, 3, 4, 5	6, 7, 8, 9, 0	Jump to correspondingly numbered Cue Point in track
F5	F10	Activate/deactivate Keylock
W	S	Play/pause
Т	G	Pitch-bend down
Υ	Н	Pitch-bend up
U	J	"Bleep" (censor)
I	K	Set/trigger Temporary Cue Point
0	L	Set/adjust "Loop In" point
Р	;	Set/adjust "Loop Out" point
]	1	Loop on/off
Alt + 1, 2, 3, 4, 5	Alt + 6, 7, 8, 9, 0	Autoloop on/off: 1/16 beat, 1/8 beat, 1/4 beat, 1/2 beat, 1 beat (respectively)
Ctrl + Alt + 1, 2, 3, 4, 5	Ctrl + Alt + 6, 7, 8, 9, 0	Loop Roll: 1/16 beat, 1/8 beat, 1/4 beat, 1/2 beat, 1 beat (respectively)
Alt + Space Bar	Alt + Space Bar (x2)	Activate Tap Tempo (with Beat Grid disabled)

# Numark NS6 NS7 V7

# Serato ITCHO 2.0

## **BEAT GRID**

KEYBOARD	MOUSE	COMMAND
Alt + Space Bar	Click Grid Edit	Enter Grid Edit
Esc	n/a	Exit Grid Edit
Enter	Click Grid Edit	Save Grid Edit changes
X	Alt + double-click	Set Beat Marker
Del	n/a	Delete Beat Marker
Shift + Del	n/a	Delete all Beat Markers
<b>←</b> , <b>→</b> , <b>♠</b> , <b>♦</b>	Alt + click & drag a white Beat Marker	Adjust (contract/stretch) Beat Grid
Shift + <b>←</b> , <b>→</b> , <b>♠</b> , <b>♦</b>	n/a	Fast adjust (contract/stretch) Beat Grid
Ctrl + ←, →, ♠, ♦	Alt + click & drag the red Downbeat Marker	Slip Beat Grid
Shift + Ctrl + ◆, →, ♠, ♦	n/a	Fast-slip Beat Grid

#### Notes:

- Beat Grid edit keys only apply when Grid Edit is enabled.
- For the shortcuts requiring arrow keys: Use the up/down arrow keys (♠, ♦) when in vertical display mode and the left/right arrow keys (♠, ♦) when in horizontal display mode.

# **HARDWARE SHORTCUTS**

These shortcuts are accessible using the SHIFT buttons on your NS6 / NS7 / V7:

## LOOPS

SHORTCUT	COMMAND	
SHIFT + IN	Loop Roll, eighth-note	
SHIFT + OUT	Loop Roll, quarter-note	
SHIFT + SELECT	Loop Roll, half-note	
SHIFT + RELOOP	Loop Roll, whole-note	
SHIFT + 1/2	Reloop Loop 1	
SHIFT + 2X	Reloop Loop 2	
SHIFT + SHIFT LEFT	Reloop Loop 3	
SHIFT + SHIFT RIGHT	Reloop Loop 4	

## SORTING

SHORTCUT	COMMAND	
SHIFT + FWD	Sort current Library/Crate/Panel View by album	
SHIFT + BACK	Sort current Library/Crate/Panel View by track number	
SHIFT + CRATE	Sort current Library/Crate/Panel View by <b>song</b>	
SHIFT + PREPARE	Sort current Library/Crate/Panel View by artist	
SHIFT + FILES	Sort current Library/Crate/Panel View by <b>BPM</b>	

## **SYNC BUTTON FUNCTIONS**

### With Beat Grid enabled:

- SYNC: Activates Sync Mode for that Deck.
  - o Pressing SYNC on any additional Deck will sync it to the first one.
  - o Pressing SYNC on a Deck already in Sync Mode will re-sync it.
- SHIFT + SYNC deactivates Sync Mode for that Deck.

### With Beat Grid disabled:

- SYNC: Activates Auto-Tempo (matches that Deck's BPM to the opposite Deck's BPM).
- SHIFT + SYNC: Deactivates Auto-Tempo for that Deck.